

oishi™

Clock Operating Instructions

Function symbol/Buttons Positions:

Ⓜ : Hourly announcement on

Ⓜ : Alarm on

PM: Afternoon

AL: Alarm in adjustable state

B1: MODE

 
B2: MIN

B3: HR

B4: TALKING




Front

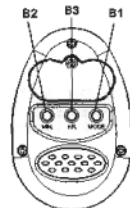

Back

Mode change:

 Press B1 to change the functional modes according to the following direction:



Operating Instructions:

1. To set time:

Starting from time display mode, press B1 (MODE) to enter time setting mode. Press B2 (MIN), B3 (HR) to adjust minutes and hours respectively to the correct time.

2. To set Alarm time:

Starting from time display mode, press B1 (MODE) twice to enter alarm setting mode. "AL" symbol will display with blinking numerals. Press B2 (MIN), B3 (HR) to adjust minutes and hours respectively to the appropriate alarm time.

3. Choose the alarm sound and turn on or off the alarm:

In normal time display, press B3 (HR) button to choose the alarm sound and turn on or off the alarm. When setting with alarm sound, it will play the alarm sound and the alarm time is shown on the display, the alarm function is on, after playing the alarm sound, it returns to the normal time display. When setting without alarm sound, alarm function is off, then it play "Di".

4. Turn on/off hourly announcement:

Starting from time display mode, B2 (MIN) to activate (see symbol) or deactivate hourly announcement (no symbol).

5. Snooze function:

When the alarm sounds, press B4 (TALKING) to stop the alarm and start the snooze function. The alarm will sound again every five minutes after the snooze starts. The alarm sound will happen not more than six times.

6. Listen to the alarm sound:

 
In normal time display mode, press and hold B4 (TALKING) button.

Battery replacement:

Replace the batteries when the digital numerals on the screen appear blue, vanish, or the volume fades out. The watch requires two LR44 batteries.

Notes: Different models have different designs, but have the same functions and setting methods.

When change the battery, take off the screw of battery lid, disconnect the battery lid.

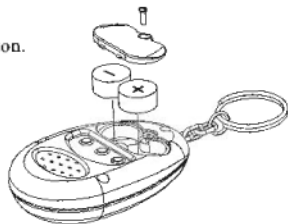

BATTERIES & OPERATING INSTRUCTIONS INCLUDED